

Operation Manual for Chiller Shower Bath.

SECTION 1:

Check your Power Supply with Proper Earthing

Check your main switch (MCB) is turn on,

Check Led's and Lamp lit in the Main Control Panel

Check the water supply is on Open Position

SECTION 2: Content

- ◆ Smart 10 Sec Chill Shower Control Panel
- ◆ Digital Pump On Display
- ◆ Water Temp. Range 10 To 15 Deg*
- ◆ Digital Time Delay for compressor to restarts
- ◆ Timer Range 0 To 10 Sec.
- ◆ System On indication
- ◆ Power On Indication
- ◆ Feather touch Keypad

After checking all the section 1 now you are ready for operation


Control Panel.

- a) On/Off Key
 - b) Digital Timer Display
 - c) Timer Range 10 Sec
- 1 key: on/off (Chiller water Pump)
2 keys: : on/off (Normal water Pump) optional

Timer Display

Chill Water On/off key

Normal water On/off key

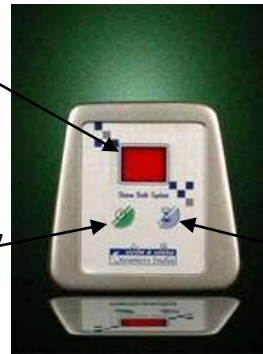

THEORY OF OPERATION

1. Display CONTROL "ON"

Depress and release the "ON" button. The **Smart 10 Sec** control will display the TIME and will Start the Chiller Pump for period of 10 Sec. and shut-off Automatically and again Depress and release for the next cycle of 10 sec

(Water Consumption per 10 Sec is 1.5 Ltr)

2. CONTROL "TEMPERATURE"-Setting the Chill Shower water temperature

(located in main control in the water storage tank)

Press and hold "SET" for 5 sec and release, Display will change to set range and flash. Using the "UP/DOWN" Key can now change the set point range. After Achieving the desired range, which returns or confirms in that set point has been stored in the memory. Factory SET Point in 10 Degrees

6. MEMORY

The **Smart** control automatically stores and displays the last preferred TEMPERATURE settings for the next steam bath. [Note: If the OFF button is activated during setting, the memory is erased and a steam bath will start with a last previous setting stored